


**REPLACEMENT PARTS LIST**

**WALL MOUNT AIR HANDLER  
B6BW SERIES**



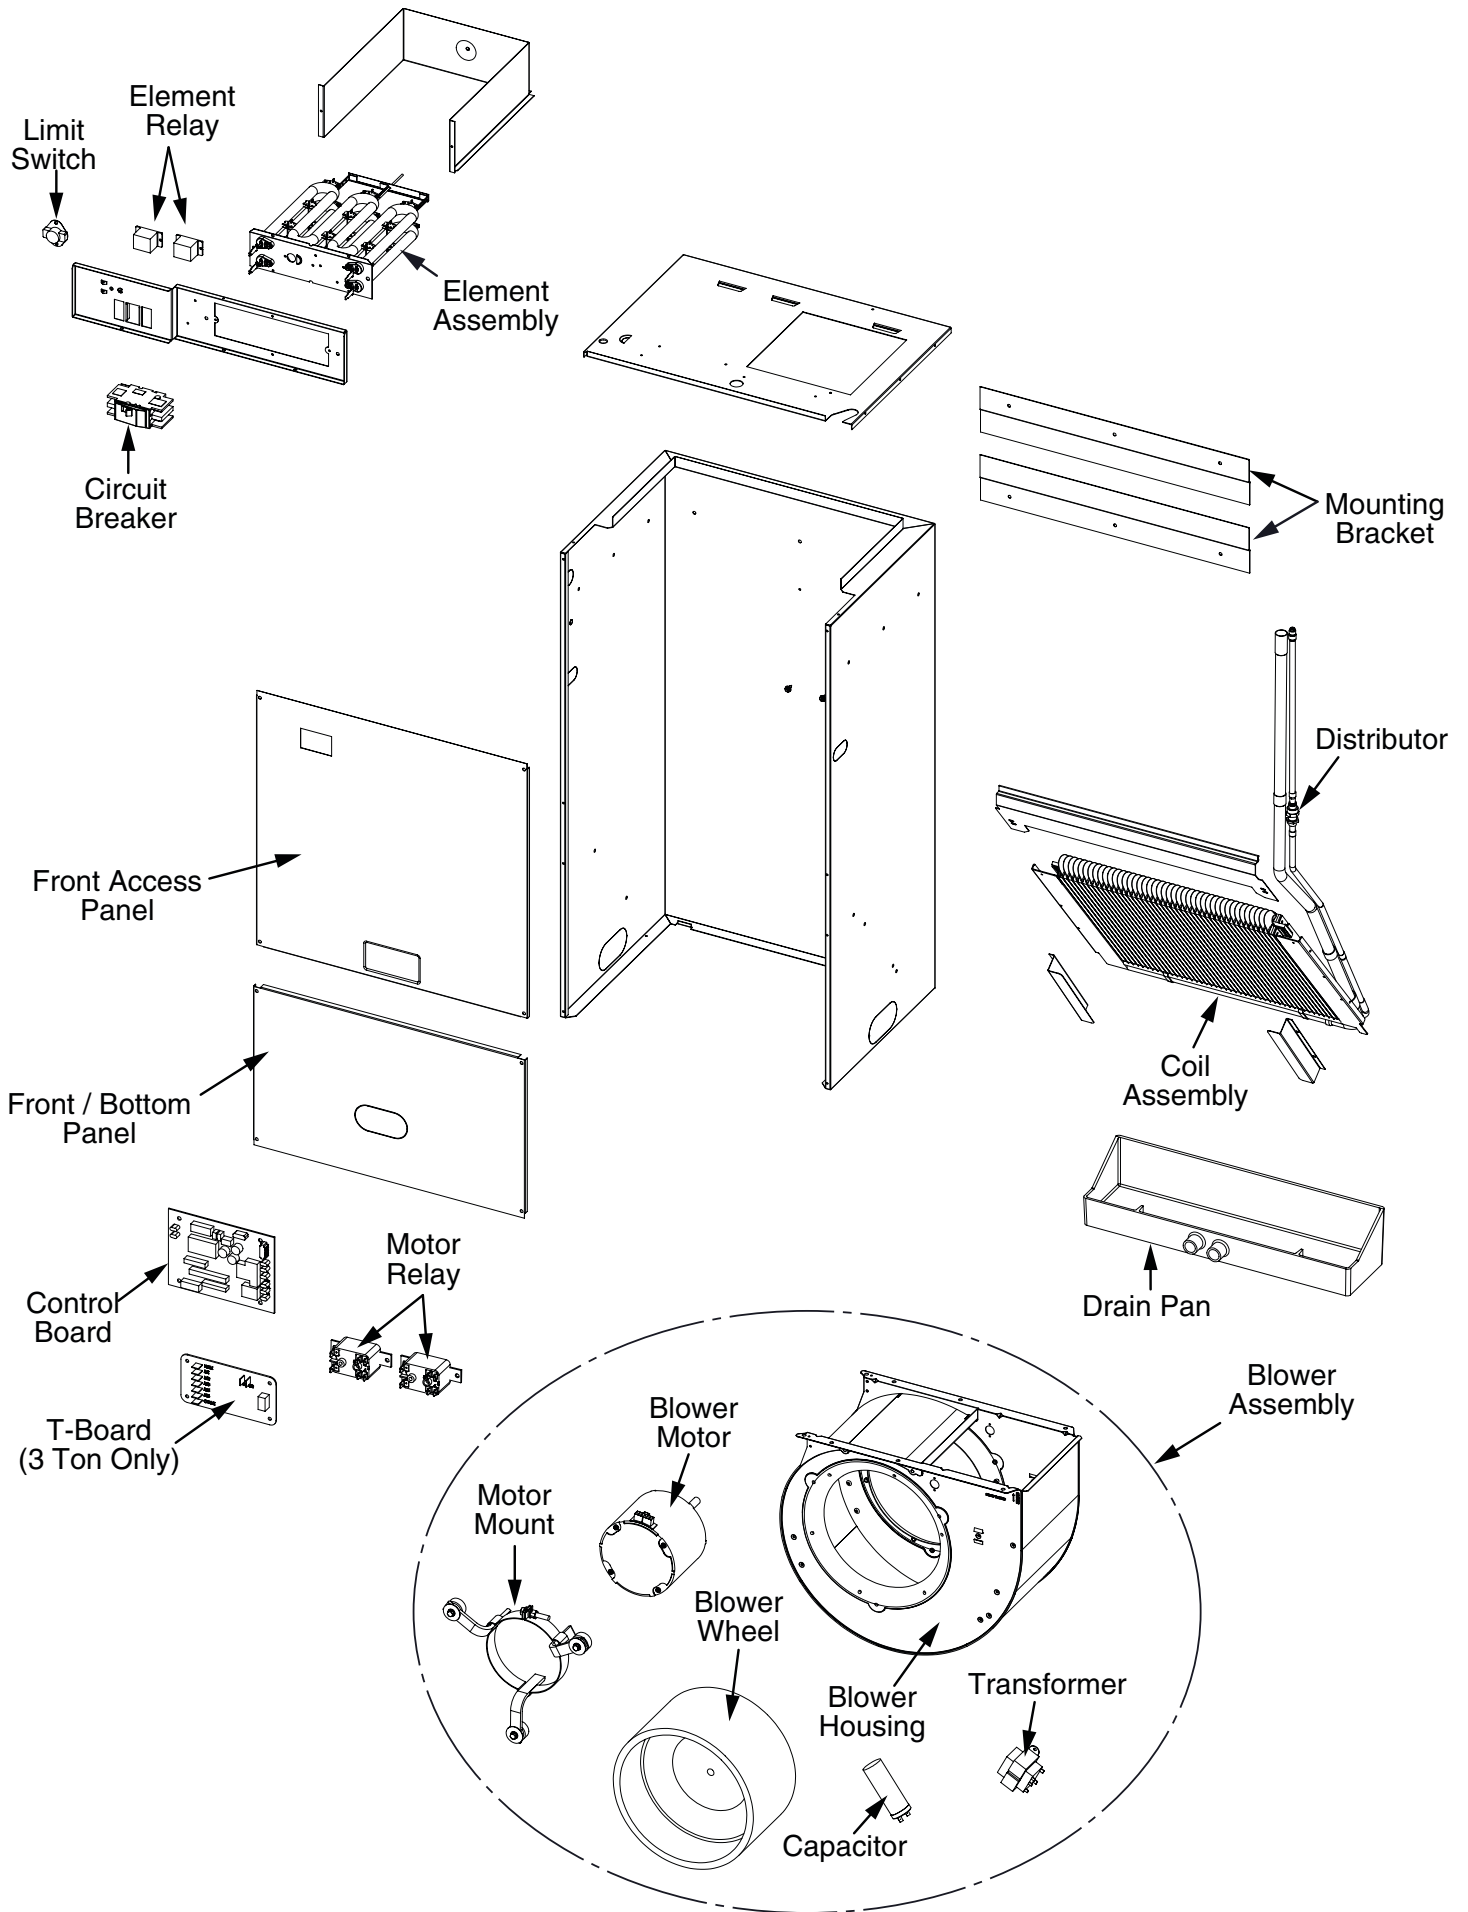

## B6BW WALL MOUNT AIR HANDLER

DESCRIPTION	018K-05	018K-08	019K-05	019K-08	024K-05	024K-08	024K-10
BLOWER ASSEMBLY	921098	921098	921100	921100	921099	921099	921099
BLOWER HOUSING	297210	297210	297210	297210	297210	297210	297210
BLOWER MOTOR	622497	622497	622497	622497	622450	622450	622450
BLOWER WHEEL	667251R	667251R	667251R	667251R	667251R	667251R	667251R
CAPACITOR	622133	622133	622133	622133	622133	622133	622133
CIRCUIT BREAKER	632249	632249	632249	632249	632249	632249	632249
CLOSE OFF PANEL (NOT SHOWN)	—	—	294261	294261	—	—	—
COIL ASSEMBLY	921102	921102	921104	921104	921103	921103	921103
CONTROL BOARD	1016380R	1016380R	1016380R	1016380R	1016380R	1016380R	1016380R
DECORATOR PANEL - OPTIONAL (NOT SHOWN)	903892	903892	919583	919583	903892	903892	903892
DISTRIBUTOR	664516	664516	1014894	1014894	664518	664518	664518
DRAIN PAN	669360	669360	669360	669360	669360	669360	669360
ELEMENT ASSEMBLY	1007315R	1007316R	1007315R	1007316R	1007315R	1007316R	1007317R
ELEMENT RELAY - DC (BLACK)	622210	622210	622210	622210	622210	622210	622210
ELEMENT RELAY - AC (WHITE)	624843	624843	624843	624843	624843	624843	624843
FRONT / BOTTOM PANEL	392301R	392301R	392301R	392301R	392301R	392301R	392301R
FUSE - 3 AMP (NOT SHOWN)	632261R	632261R	632261R	632261R	632261R	632261R	632261R
LIMIT SWITCH	626408	626407	626408	626407	626408	626407	626407
MOTOR MOUNT	913871	913871	913871	913871	913871	913871	913871
MOTOR RELAY	—	—	—	—	—	—	—
MOUNTING BRACKET	176351	176351	176351	176351	176351	176351	176351
TRANSFORMER	621709	621709	621709	621709	621709	621709	621709
SET OF WIRES (NOT SHOWN)	M0057202R	M0057203R	M0057202R	M0057203R	M0057202R	M0057203R	M0057203R
T-BOARD	—	—	—	—	—	—	—

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

## B6BW WALL MOUNT AIR HANDLER

DESCRIPTION	030K-05	030K-08	030K-10	036K-05	036K-08	036K-10
BLOWER ASSEMBLY	921100	921100	921100	921101	921101	921101
BLOWER HOUSING	297210	297210	297210	297212	297212	297212
BLOWER MOTOR	622451	622451	622451	622514	622514	622514
BLOWER WHEEL	667251R	667251R	667251R	667037R	667037R	667037R
CAPACITOR	622133	622133	622133	—	—	—
CIRCUIT BREAKER	632249	632249	632249	632249	632249	632249
CLOSE OFF PANEL (NOT SHOWN)	294261	294261	294261	—	—	—
COIL ASSEMBLY	921104	921104	921104	921105	921105	921105
CONTROL BOARD	1016380R	1016380R	1016380R	624784	624784	624784
DECORATOR PANEL - OPTIONAL (NOT SHOWN)	919583	919583	919583	919583	919583	919583
DISTRIBUTOR	664517	664517	664517	664519	664519	664519
DRAIN PAN	669360	669360	669360	669360	669360	669360
ELEMENT ASSEMBLY	1007315R	1007316R	1007317R	1007315R	1007316R	1007317R
ELEMENT RELAY - DC (BLACK)	622210	622210	622210	622210	622210	622210
ELEMENT RELAY - AC (WHITE)	624843	624843	624843	624843	624843	624843
FRONT / BOTTOM PANEL	392301R	392301R	392301R	2B5671R	2B5671R	2B5671R
FUSE - 3 AMP (NOT SHOWN)	632261R	632261R	632261R	632261R	632261R	632261R
LIMIT SWITCH	626408	626407	626408	626407	626407	626407
MOTOR MOUNT	913871	913871	913871	913871	913871	913871
MOTOR RELAY	—	—	—	624720	624720	624720
MOUNTING BRACKET	176351	176351	176351	176351	176351	176351
TRANSFORMER	621709	621709	621709	621709	621709	621709
SET OF WIRES (NOT SHOWN)	M0057202R	M0057203R	M0057203R	M0057204R	M0057205R	M0057205R
T-BOARD	—	—	—	624719	624719	624719

Please specify the correct Model No., Serial No., and part number(s) when ordering parts from the nearest authorized dealer or service center.

