

| DESCRIPTION                            | 060D-V24B1 | 080D-V35C1 | 100D-V35C1 | 115D-V45D1 |
|--|------------|------------|------------|------------|
| Blower Control Board                   | 922016     | 922016     | 922016     | 922016     |
| Blower Housing                         | 297207R    | 297209R    | —          | 297209R    |
| Blower Housing (with Wheel)            | —          | —          | 1027002R   | —          |
| Blower Limit Switch                    | 626611R    | 626611R    | 626611R    | 626611R    |
| Blower Motor                           | 622683     | 622684     | 622685     | 622685     |
| Blower Wheel                           | 667374R    | 1017727R   | —          | 1017727R   |
| Burner Assembly                        | M0041805R  | 904830     | 904831     | M0076305R  |
| Burner Tube Manifold                   | 664611R    | 664243R    | 664244R    | 664245     |
| Control Board                          | 920916     | 920916     | 920916     | 920916     |
| Door Set                               | 904768     | 904769     | 904769     | 904770     |
| Door Switch                            | 632693R    | 632693R    | 632693R    | 632693R    |
| Drain Tube (Hard, "J") (Not Shown)     | 663706R    | 663706R    | 663706R    | 663706R    |
| Drain Tube (Soft, "J" 30") (Not Shown) | 663707R    | 663707R    | 663707R    | 663707R    |
| Drain Tube (Soft, "23") (Not Shown)    | 664434R    | 664434R    | 664434R    | 664434R    |
| Finish Flange                          | 664633R    | 664633R    | 664633R    | 664633R    |
| Flame Sensor                           | 632484R    | 632484R    | 632484R    | 632484R    |
| Fuse                                   | 632261R    | 632261R    | 632261R    | 632261R    |
| Gas Valve                              | 921691     | 921691     | 921691     | 921691     |
| Harness Inducer-Resistor (Not Shown)   | 1014832R   | 1014829R   | 1014830R   | 1014831R   |
| Heat Exchanger                         | 904792     | 904793     | 904794     | 904795     |
| High Temperature Hose (Not Shown)      | 263967R    | 263967R    | 263967R    | 263967R    |
| Ignitor Assembly (Nitride)             | 1017743S   | 1017743S   | 1017743S   | 1017743S   |
| Inducer Limit Switch                   | 626599R    | 626599R    | 626599R    | 626599R    |
| Inducer Motor                          | 1003442    | 1003442    | 1003442    | 1003442    |
| Inducer Orifice                        | 669926R    | 669720R    | 669716R    | 669717R    |
| In-Line Drain Assembly                 | 664435R    | 664435R    | 664435R    | 664435R    |
| Inshot Burner                          | 661128R    | 661128R    | 661128R    | 661128R    |
| Main Air Limit Switch                  | 626601R    | 626601R    | 626613R    | 626612R    |
| Motor Choke                            | —          | 622340R    | 622340R    | 622340R    |
| Motor Mount Kit                        | 904907     | 904907     | 904907     | 904951     |
| Orifice (Natural Gas)                  | 661045R    | 661045R    | 661045R    | 661046R    |
| Outlet Header Box                      | 904802     | 904803     | 904803     | 904804     |
| Pressure Switch (Inducer)              | 1016295R   | 1016296R   | 1016297R   | 1016298R   |
| Roll-Out Limit Switch                  | 626610R    | 626610R    | 626610R    | 626610R    |
| Set of Wires (Not Shown)               | M0036048R  | M0036049R  | M0036052R  | M0036051R  |
| Top Panel                              | 2B3562R    | 2B3563R    | 2B3563R    | —          |
| Transformer                            | 622341R    | 622341R    | 622341R    | 622341R    |
| Tube (Soft, 6.5") (Not Shown)          | 663727R    | 663727R    | 663727R    | 663727R    |

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

[FOR COMPONENT LOCATIONS, SEE PAGE 18.](#)

# \*G7TN-1 DOWNFLOW - COMPONENT LOCATION

