


HP14 EXPLODED VIEW

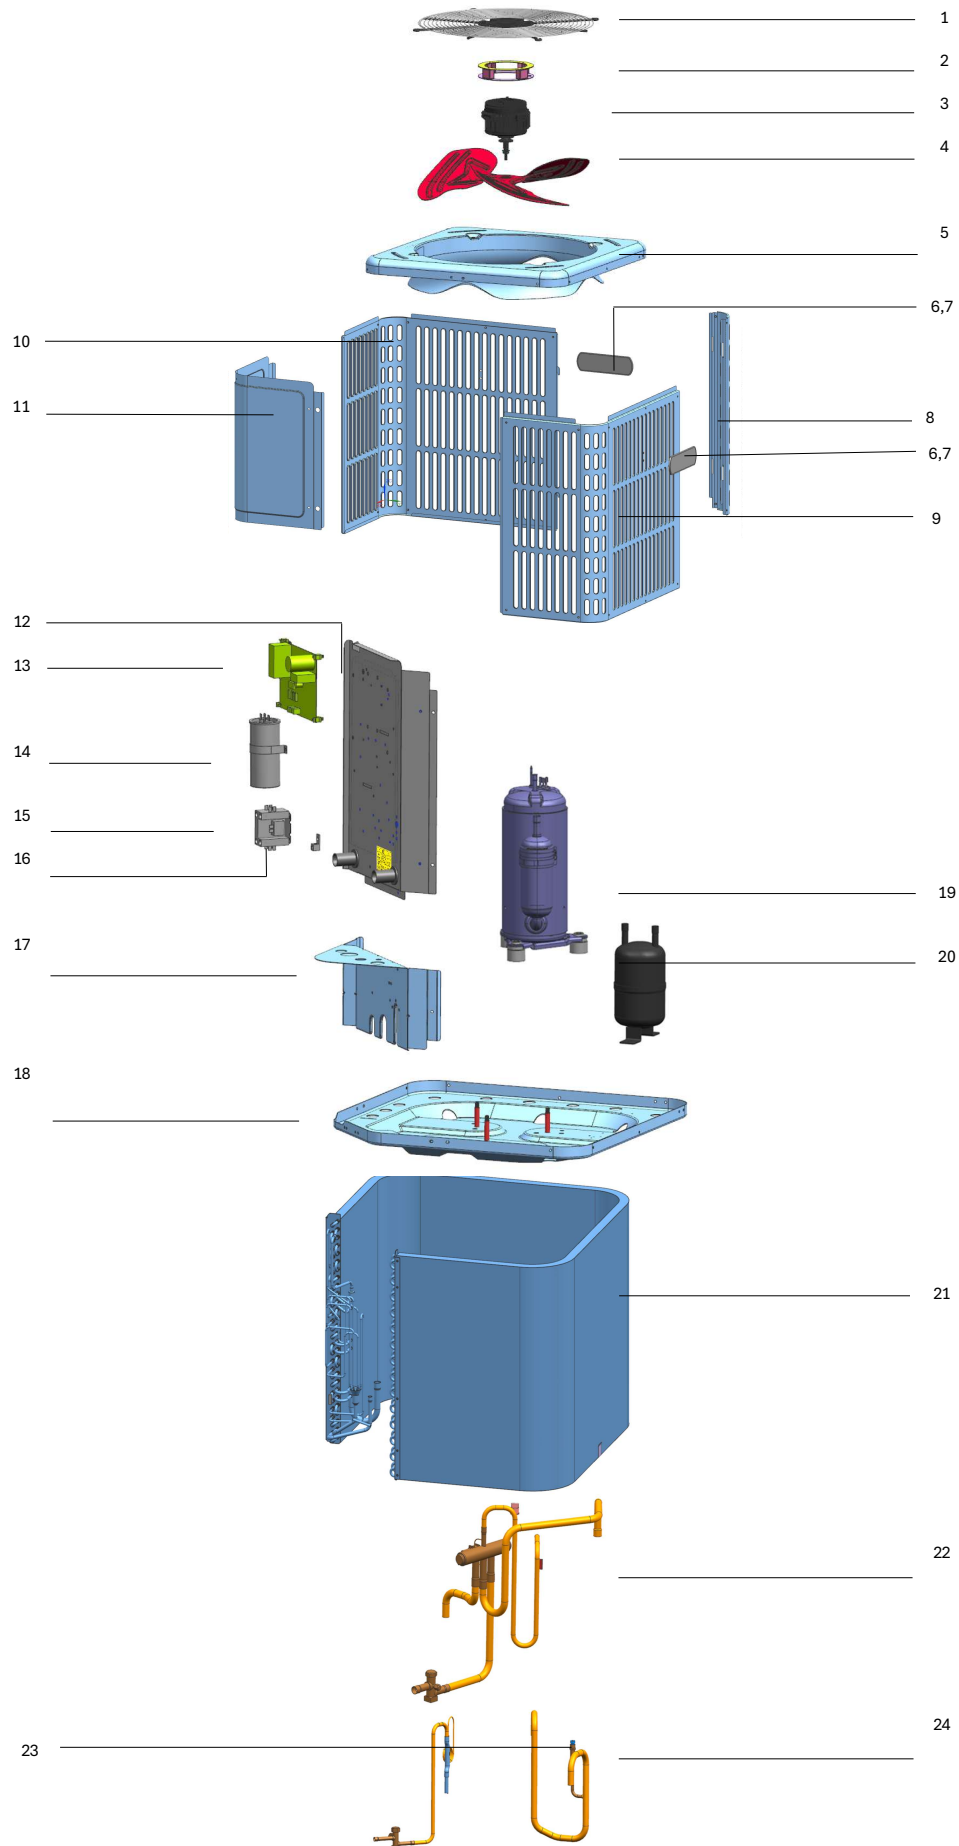

Parts List - AC-I-18HP14

PART #	PART MODEL	UNIT MODEL
602938000004	Air Outlet Grille (Wire Mesh)	AC-I-18HP14
601247000091	Motor Mounting Bracket	AC-I-18HP14
602401700044	Brushless DC Motor	AC-I-18HP14
602907200002	Axial Fan Blade(Metallic)	AC-I-18HP14
601238000178	Top Cover Insulating Panel Assembly	AC-I-18HP14
601238000187	Stand column	AC-I-18HP14
601238000180	Right Side Panel	AC-I-18HP14
601238000181	Left Side Panel	AC-I-18HP14
601238000169	Upper Side Panel	AC-I-18HP14
601238000110	Control Board Mounting Plate Assembly	AC-I-18HP14
601338000008	Outdoor Control Board	AC-I-18HP14
602403300007	Compressor capacitor	AC-I-18HP14
602315100006	Contactora	AC-I-18HP14
602404700062	Terminal Block	AC-I-18HP14
601238000168	Lower Side Panel	AC-I-18HP14
601238000179	Outdoor Unit Chassisn Assembly	AC-I-18HP14
601403100020	Compressor	AC-I-18HP14
601605000017	Gas-liquid separator	AC-I-18HP14
601530000113	Condensor Assembly	AC-I-18HP14
601637001247	Reversing Valve Components	AC-I-18HP14
601602400002	Solenoid Valve	AC-I-18HP14
602410100007	Solenoid Coil	AC-I-18HP14
601602000011	Check Valve	AC-I-18HP14
602405F00013	High Pressure switch	AC-I-18HP14
601602200008	Reversing Valve	AC-I-18HP14
602410100004	Reversing Valve Coil	AC-I-18HP14
601602100003	Stop valve(Gas side)	AC-I-18HP14
601642000184	Check Valve Assembly	AC-I-18HP14
601602000004	Check Valve	AC-I-18HP14
601602100001	Stop valve(liquid side)	AC-I-18HP14
601637001254	Compressor Exhaust Pipe Assembly	AC-I-18HP14
601603900001	Thermal Fuse Plug	AC-I-18HP14
602301500089	Temperature Sensor(T3 T4 TP)	AC-I-18HP14

Parts List - AC-I-24HP14

PART #	PART MODEL	UNIT MODEL
602938000004	Air Outlet Grille (Wire Mesh)	AC-I-24HP14
601247000091	Motor Mounting Bracket	AC-I-24HP14
602401700044	Brushless DC Motor	AC-I-24HP14
602907200002	Axial Fan Blade(Metallic)	AC-I-24HP14
601238000178	Top Cover Insulating Panel Assembly	AC-I-24HP14
601238000187	Stand column	AC-I-24HP14
601238000180	Right Side Panel	AC-I-24HP14
601238000181	Left Side Panel	AC-I-24HP14
601238000169	Upper Side Panel	AC-I-24HP14
601238000110	Control Board Mounting Plate Assembly	AC-I-24HP14
601338000008	Outdoor Control Board	AC-I-24HP14
602403300012	Compressor capacitor	AC-I-24HP14
602315100006	Contactora	AC-I-24HP14
602404700062	Terminal Block	AC-I-24HP14
601238000168	Lower Side Panel	AC-I-24HP14
601238000179	Outdoor Unit Chassisn Assembly	AC-I-24HP14
601403100018	Compressor	AC-I-24HP14
601605000017	Gas-liquid separator	AC-I-24HP14
601530000113	Condensor Assembly	AC-I-24HP14
601637001258	Reversing Valve Components	AC-I-24HP14
601602400002	Solenoid Valve	AC-I-24HP14
602410100007	Solenoid Coil	AC-I-24HP14
601602000011	Check Valve	AC-I-24HP14
602405F00013	High Pressure switch	AC-I-24HP14
601602200008	Reversing Valve	AC-I-24HP14
602410100004	Reversing Valve Coil	AC-I-24HP14
601602100003	Stop valve(Gas side)	AC-I-24HP14
601642000185	Check Valve Assembly	AC-I-24HP14
601602000004	Check Valve	AC-I-24HP14
601602100001	Stop valve(liquid side)	AC-I-24HP14
601637001256	Compressor Exhaust Pipe Assembly	AC-I-24HP14
601603900001	Thermal Fuse Plug	AC-I-24HP14
602301500089	Temperature Sensor(T3 T4 TP)	AC-I-24HP14

Parts List - AC-I-30HP14

PART #	PART MODEL	UNIT MODEL
602938000003	Air Outlet Grille (Wire Mesh)	AC-I-30HP14
601247000091	Motor Mounting Bracket	AC-I-30HP14
602401700044	Brushless DC Motor	AC-I-30HP14
602907200001	Axial Fan Blade(Metallic)	AC-I-30HP14
601238000170	Top Cover Insulating Panel Assembly	AC-I-30HP14
601238000187	Stand column	AC-I-30HP14
601238000182	Right Side Panel	AC-I-30HP14
601238000183	Left Side Panel	AC-I-30HP14
601238000169	Upper Side Panel	AC-I-30HP14
601238000110	Control Board Mounting Plate Assembly	AC-I-30HP14
601338000008	Outdoor Control Board	AC-I-30HP14
602403300003	Compressor capacitor	AC-I-30HP14
602315100006	Contactora	AC-I-30HP14
602404700062	Terminal Block	AC-I-30HP14
601238000168	Lower Side Panel	AC-I-30HP14
601238000164	Outdoor Unit Chassisn Assembly	AC-I-30HP14
601403100019	Compressor	AC-I-30HP14
601605000017	Gas-liquid separator	AC-I-30HP14
601530000111	Condensor Assembly	AC-I-30HP14
601637001259	Reversing Valve Components	AC-I-30HP14
601602400002	Solenoid Valve	AC-I-30HP14
602410100007	Solenoid Coil	AC-I-30HP14
601602000011	Check Valve	AC-I-30HP14
602405F00013	High Pressure switch	AC-I-30HP14
601602200008	Reversing Valve	AC-I-30HP14
602410100004	Reversing Valve Coil	AC-I-30HP14
601602100003	Stop valve(Gas side)	AC-I-30HP14
601642000186	Check Valve Assembly	AC-I-30HP14
601602000004	Check Valve	AC-I-30HP14
601602100001	Stop valve(liquid side)	AC-I-30HP14
601637001262	Compressor Exhaust Pipe Assembly	AC-I-30HP14
601603900001	Thermal Fuse Plug	AC-I-30HP14
602301500089	Temperature Sensor(T3 T4 TP)	AC-I-30HP14

Parts List - AC-I-36HP14

PART #	PART MODEL	UNIT MODEL
602938000003	Air Outlet Grille (Wire Mesh)	AC-I-36HP14
601247000091	Motor Mounting Bracket	AC-I-36HP14
602401700044	Brushless DC Motor	AC-I-36HP14
602907200001	Axial Fan Blade(Metallic)	AC-I-36HP14
601238000170	Top Cover Insulating Panel Assembly	AC-I-36HP14
601238000187	Stand column	AC-I-36HP14
601238000182	Right Side Panel	AC-I-36HP14
601238000183	Left Side Panel	AC-I-36HP14
601238000169	Upper Side Panel	AC-I-36HP14
601238000110	Control Board Mounting Plate Assembly	AC-I-36HP14
601338000008	Outdoor Control Board	AC-I-36HP14
602403300012	Compressor capacitor	AC-I-36HP14
602315100006	Contactora	AC-I-36HP14
602404700062	Terminal Block	AC-I-36HP14
601238000168	Lower Side Panel	AC-I-36HP14
601238000164	Outdoor Unit Chassisn Assembly	AC-I-36HP14
601403100021	Compressor	AC-I-36HP14
601605000017	Gas-liquid separator	AC-I-36HP14
601530000111	Condensor Assembly	AC-I-36HP14
601637001264	Reversing Valve Components	AC-I-36HP14
601602400002	Solenoid Valve	AC-I-36HP14
602410100007	Solenoid Coil	AC-I-36HP14
601602000011	Check Valve	AC-I-36HP14
602405F00013	High Pressure switch	AC-I-36HP14
601602200008	Reversing Valve	AC-I-36HP14
602410100004	Reversing Valve Coil	AC-I-36HP14
601602100003	Stop valve(Gas side)	AC-I-36HP14
601642000187	Check Valve Assembly	AC-I-36HP14
601602000004	Check Valve	AC-I-36HP14
601602100001	Stop valve(liquid side)	AC-I-36HP14
601637001265	Compressor Exhaust Pipe Assembly	AC-I-36HP14
601603900001	Thermal Fuse Plug	AC-I-36HP14
602301500089	Temperature Sensor(T3 T4 TP)	AC-I-36HP14

Parts List - AC-I-42HP14

PART #	PART MODEL	UNIT MODEL
602938000003	Air Outlet Grille (Wire Mesh)	AC-I-42HP14
601247000091	Motor Mounting Bracket	AC-I-42HP14
602401700044	Brushless DC Motor	AC-I-42HP14
602907200001	Axial Fan Blade(Metallic)	AC-I-42HP14
601238000170	Top Cover Insulating Panel Assembly	AC-I-42HP14
601238000186	Stand column	AC-I-42HP14
601238000184	Right Side Panel	AC-I-42HP14
601238000185	Left Side Panel	AC-I-42HP14
601238000169	Upper Side Panel	AC-I-42HP14
601238000110	Control Board Mounting Plate Assembly	AC-I-42HP14
601338000008	Outdoor Control Board	AC-I-42HP14
602403300016	Compressor capacitor	AC-I-42HP14
602315100006	Contactora	AC-I-42HP14
602404700062	Terminal Block	AC-I-42HP14
601238000174	Lower Side Panel	AC-I-42HP14
601238000175	Outdoor Unit Chassisn Assembly	AC-I-42HP14
601403100025	Compressor	AC-I-42HP14
601605000019	Gas-liquid separator	AC-I-42HP14
601530000112	Condensor Assembly	AC-I-42HP14
601637001267	Reversing Valve Components	AC-I-42HP14
601602100003	Stop valve(Gas side)	AC-I-42HP14
602405F00013	High Pressure switch	AC-I-42HP14
601602200004	Reversing Valve	AC-I-42HP14
602410100004	Reversing Valve Coil	AC-I-42HP14
601642000188	Check Valve Assembly	AC-I-42HP14
601602000005	Check Valve	AC-I-42HP14
601602100001	Stop valve(liquid side)	AC-I-42HP14
601637001270	Compressor Exhaust Pipe Assembly	AC-I-42HP14
601603900001	Thermal Fuse Plug	AC-I-42HP14
602301500097	Temperature Sensor(T3 T4 TP)	AC-I-42HP14

Parts List - AC-I-48HP14

PART #	PART MODEL	UNIT MODEL
602938000003	Air Outlet Grille (Wire Mesh)	AC-I-48HP14
601247000091	Motor Mounting Bracket	AC-I-48HP14
602401700044	Brushless DC Motor	AC-I-48HP14
602907200001	Axial Fan Blade(Metallic)	AC-I-48HP14
601238000170	Top Cover Insulating Panel Assembly	AC-I-48HP14
601238000186	Stand column	AC-I-48HP14
601238000184	Right Side Panel	AC-I-48HP14
601238000185	Left Side Panel	AC-I-48HP14
601238000169	Upper Side Panel	AC-I-48HP14
601238000110	Control Board Mounting Plate Assembly	AC-I-48HP14
601338000008	Outdoor Control Board	AC-I-48HP14
602403300014	Compressor capacitor	AC-I-48HP14
602315100006	Contactora	AC-I-48HP14
602404700062	Terminal Block	AC-I-48HP14
601238000174	Lower Side Panel	AC-I-48HP14
601238000175	Outdoor Unit Chassisn Assembly	AC-I-48HP14
601402100001	Compressor	AC-I-48HP14
601605000019	Gas-liquid separator	AC-I-48HP14
601530000234	Condensor Assembly	AC-I-48HP14
601637001272	Reversing Valve Components	AC-I-48HP14
601602100003	Stop valve(Gas side)	AC-I-48HP14
602405F00013	High Pressure switch	AC-I-48HP14
601602200004	Reversing Valve	AC-I-48HP14
602410100004	Reversing Valve Coil	AC-I-48HP14
601642000189	Check Valve Assembly	AC-I-48HP14
601602000005	Check Valve	AC-I-48HP14
601602100001	Stop valve(liquid side)	AC-I-48HP14
601637001275	Compressor Exhaust Pipe Assembly	AC-I-48HP14
601603900001	Thermal Fuse Plug	AC-I-48HP14
602301500097	Temperature Sensor(T3 T4 TP)	AC-I-48HP14

Parts List - AC-I-60HP14

PART #	PART MODEL	UNIT MODEL
602938000003	Air Outlet Grille (Wire Mesh)	AC-I-60HP14
601247000091	Motor Mounting Bracket	AC-I-60HP14
602401700044	Brushless DC Motor	AC-I-60HP14
602907200001	Axial Fan Blade(Metallic)	AC-I-60HP14
601238000170	Top Cover Insulating Panel Assembly	AC-I-60HP14
601238000186	Stand column	AC-I-60HP14
601238000184	Right Side Panel	AC-I-60HP14
601238000185	Left Side Panel	AC-I-60HP14
601238000169	Upper Side Panel	AC-I-60HP14
601238000110	Control Board Mounting Plate Assembly	AC-I-60HP14
601338000008	Outdoor Control Board	AC-I-60HP14
602403300014	Compressor capacitor	AC-I-60HP14
602315100006	Contactora	AC-I-60HP14
602404700062	Terminal Block	AC-I-60HP14
601238000174	Lower Side Panel	AC-I-60HP14
601238000175	Outdoor Unit Chassisn Assembly	AC-I-60HP14
601402100006	Compressor	AC-I-60HP14
601605000019	Gas-liquid separator	AC-I-60HP14
601530000235	Condensor Assembly	AC-I-60HP14
601637001272	Reversing Valve Components	AC-I-60HP14
601602100003	Stop valve(Gas side)	AC-I-60HP14
602405F00013	High Pressure switch	AC-I-60HP14
601602200004	Reversing Valve	AC-I-60HP14
602410100004	Reversing Valve Coil	AC-I-60HP14
601642000190	Check Valve Assembly	AC-I-60HP14
601602000005	Check Valve	AC-I-60HP14
601602100001	Stop valve(liquid side)	AC-I-60HP14
601637001275	Compressor Exhaust Pipe Assembly	AC-I-60HP14
601603900001	Thermal Fuse Plug	AC-I-60HP14
602301500097	Temperature Sensor(T3 T4 TP)	AC-I-60HP14